


Q8n-4K Firmware Update Guide

Copyright(C) 2023 ZOOM CORPORATION. All Rights Reserved.


Proper display is not possible on grayscale devices.

Introduction

■Item to prepare

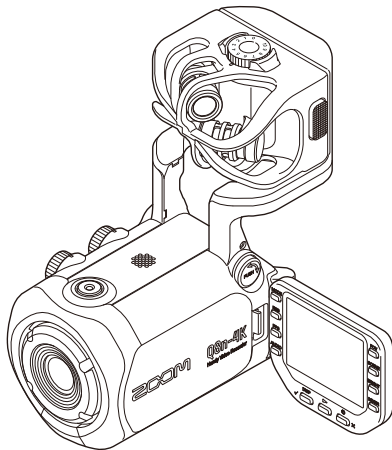

Q8n-4K

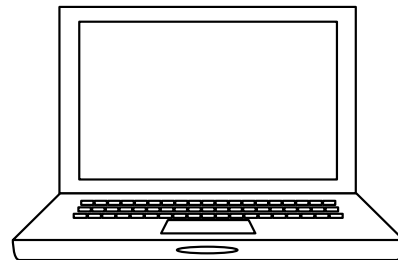

Windows or macOS computer
with Internet access



microSD card

Supported recording media

microSDHC: 4 GB – 32 GB

microSDXC: 64 GB – 512 GB

※System Version 1.10 and later supports media
larger than 512 GB.

Always format microSD cards on the Q8n-4K
after purchasing them new or using them with a
different device.

■Firmware update process


1. Download the firmware update file.
2. Extract the ZIP file.
3. Copy the extracted firmware update file to a microSD card.
4. Update the firmware.
5. Confirm that the firmware has been updated correctly.

Updating the Firmware

This guide explains firmware update to version 1.03 as an example.

1. Download the firmware update file.



Download the ZIP file that contains the firmware update file from the Q8n-4K download page.

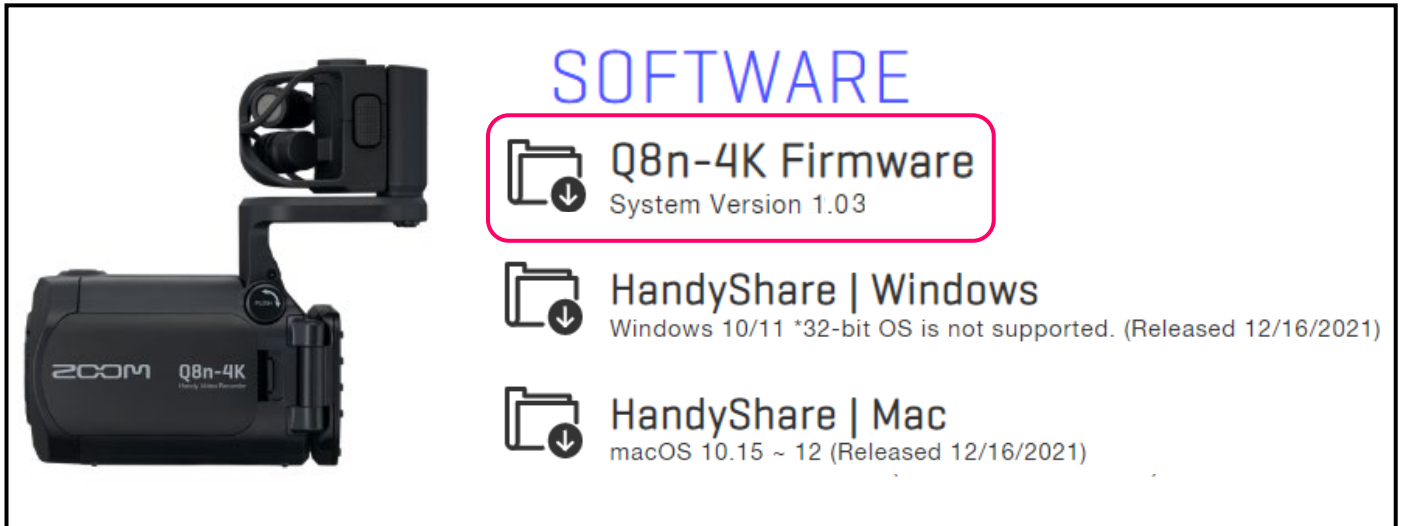


On Windows

2. Extract the ZIP file


Select the folder that contains the downloaded ZIP file. Click ① “Compressed Folder Tools” and then click ② “Extract all”. This extracts the ZIP file.

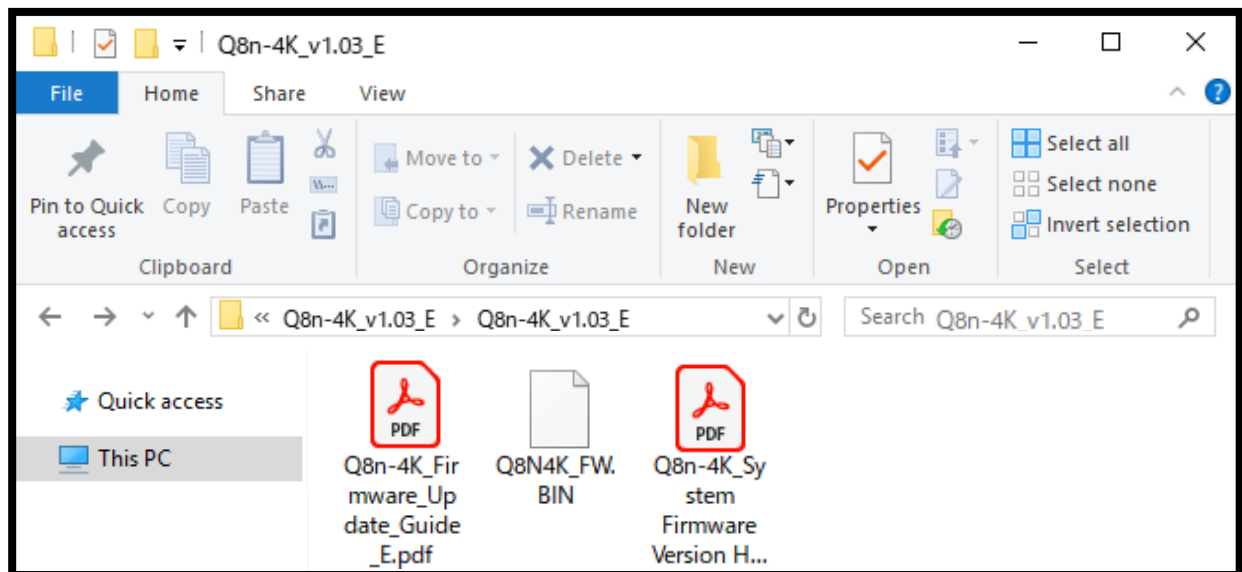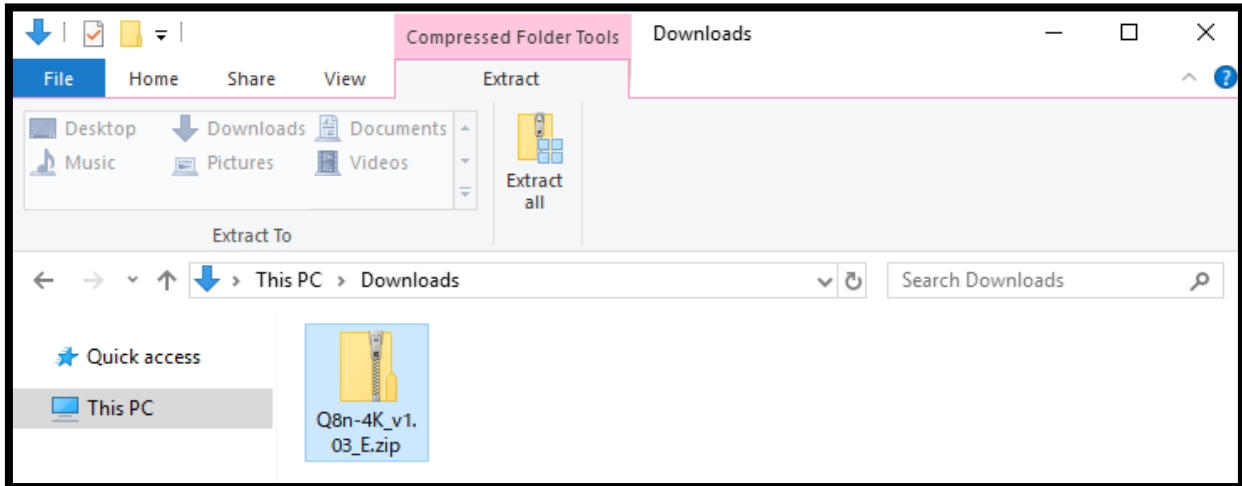

3. Copy the firmware update file to a microSD card.
Copy the “Q8N4K_FW.BIN” file to a microSD card.

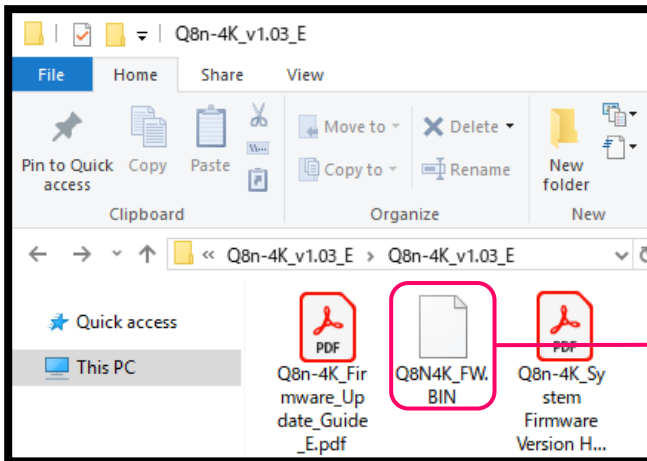

Firmware update file

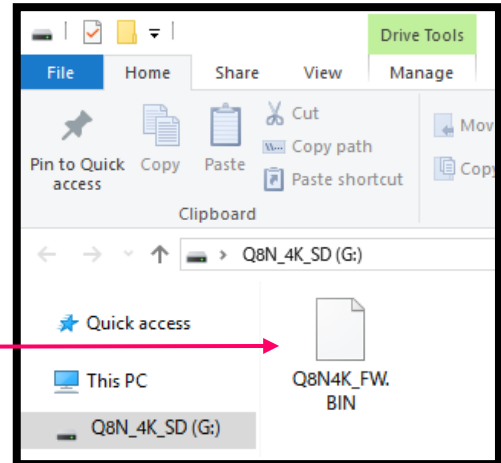

Copy the firmware update file to a microSD card.

On macOS


2. Extract the ZIP file.

After downloading, open the ① “Downloads” folder which appears at the right end of the Dock by default. Then, click ②. Downloaded files will be shown.



3. Copy the firmware update file to a microSD card.

Copy the “Q8N4K_FW.BIN” file to a microSD card.

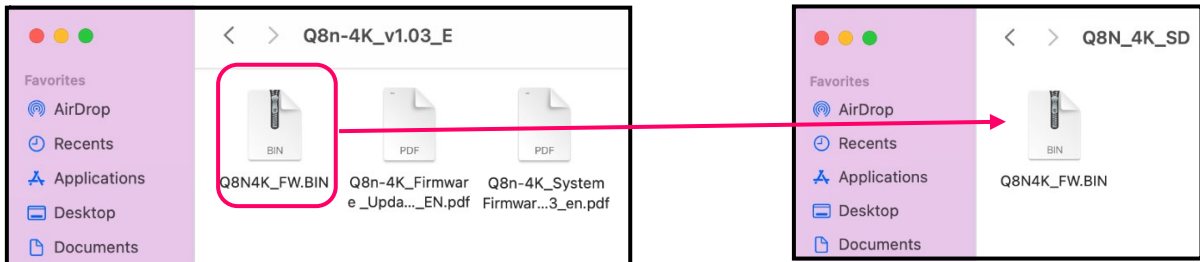

Copy the firmware update file to a microSD card.


The following procedures are the same on both Windows and macOS.


4. Charge the battery enough or connect an AC adapter.


NOTE


The firmware update is not possible if the remaining battery power is low.


5. Insert the microSD card into the Q8n-4K.

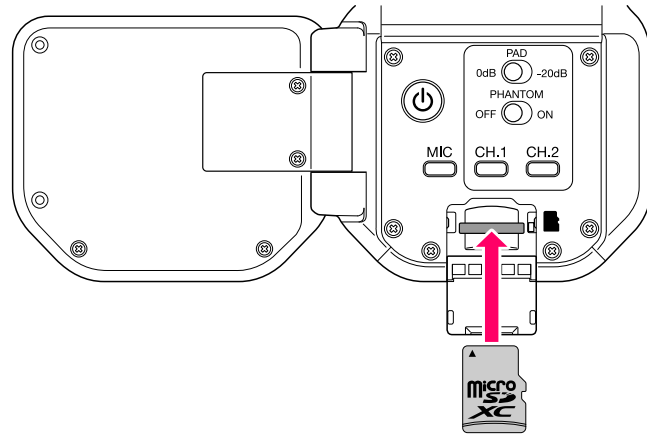

6. Turn the power on while pressing .

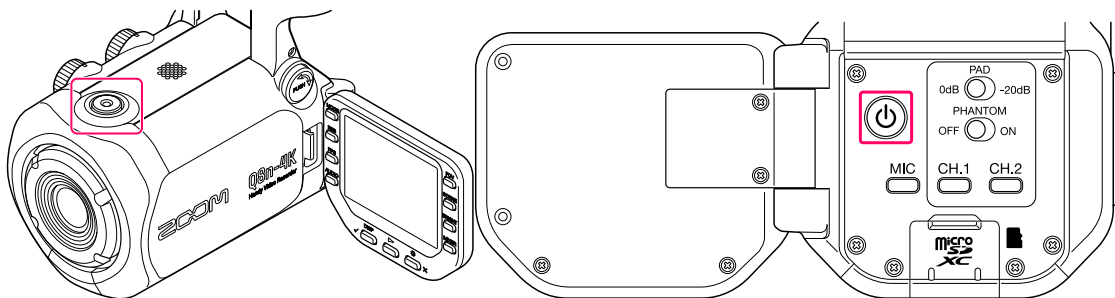

7. Press  to select “YES ✓”.

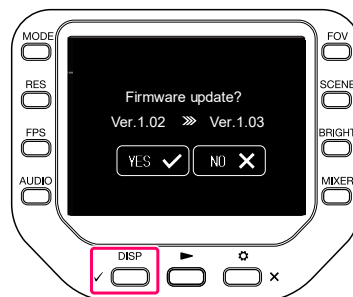

This opens a final confirmation screen.

8. Press ✓ to select “YES ✓”.

After updating, the Completion Screen opens.

NOTE

During the firmware update, do not turn the power off or remove the microSD card.


9. After the firmware update completes, turn the power off.

NOTE

In the unlikely event that firmware update should fail, follow the procedures from the beginning again to update the firmware.


Confirming that the firmware has been updated correctly


Check the firmware versions used by the Q8n-4K.

1. Press  on the Recording Screen.




The SETTINGS Screen opens.

2. Press  on the SETTINGS Screen.

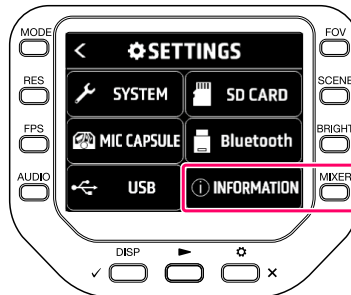

3. Check the firmware version.

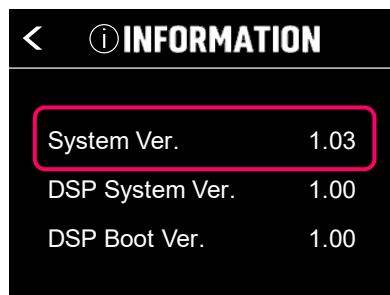

• ZOOM CORPORATION will bear no responsibility for any losses or third-party claims resulting from the use of this software. Moreover, distribution, sale, leasing, rental, alteration, and reverse engineering without permission of this software are prohibited. The specifications of this software and the contents of this document could be changed without notice in the future.

- Copying or reprinting this manual in part or in whole without permission is prohibited.
- Microsoft and Windows are trademarks of the Microsoft corporate group.
- macOS is a trademark or registered trademark of Apple Inc.
- microSDXC logos are trademarks of SD-3C LLC.
- Other product names, registered trademarks and company names in this document are the property of their respective companies.
- All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.
- The illustrations and display screens in this document could differ from the actual product.